

 


# Dual soap dispenser holder

IMPORTANT: If you are in any doubt, STOP and seek professional help. Do not proceed unless you are sure.


## Your dual soap dispenser holder

Your dual soap dispenser holder is constructed from quality stainless steel, 2.5mm in thickness. The two wall mounting holes are spaced 86mm apart and the two large holes can accommodate bottle necks up to 28mm in diameter.

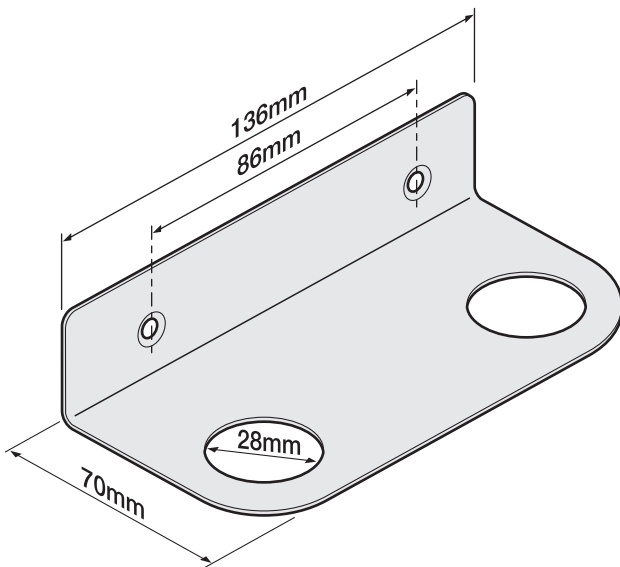

5 Place a wall plug into each hole and, if necessary, tap them fully into place with a small hammer.

 6 Align the holder with the wall plugs and insert the two screws.

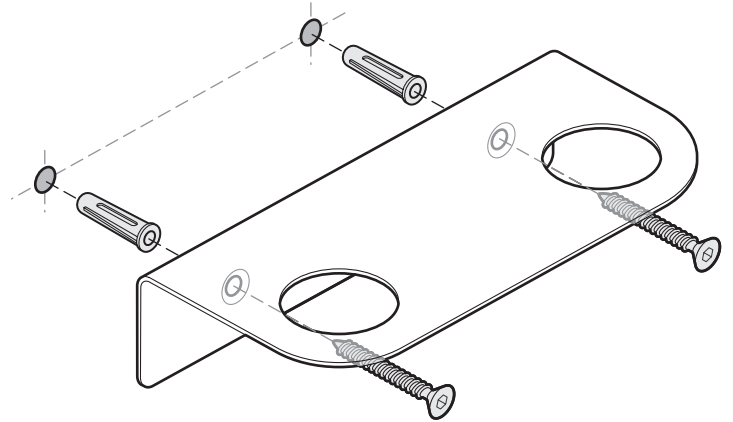


7 Use a 2.5mm hex key to tighten the screws.

## To fit a soap bottle

 1 Unscrew and remove the lid from the bottle.

2 Insert the bottle, neck up, through the hole.

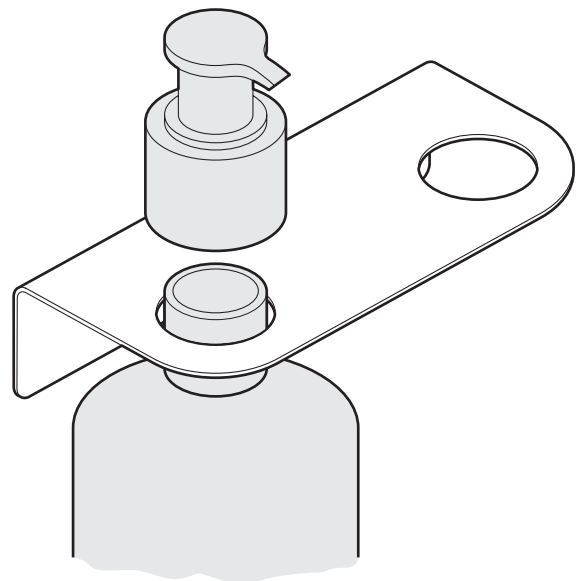

3 Tighten the lid onto the neck of the bottle.

## To fit your dual soap dispenser holder

1 Carefully determine where you wish to locate your holder:

- Check that the location is high enough from any surface below so that the bottles you will use can easily be inserted and removed.
- Also check that there are no hidden pipes or cables where the screw holes will be.

2 Use a spirit level to lightly mark a pencil line for the mounting holes.

3 Place the holder against the wall so that the pencil line is visible through the two mounting holes. Make a mark in the centres of each hole, crossing the horizontal line.

4 If the supplied wall plugs suit the wall surface, use a 5mm masonry drill bit to drill holes of suitable depth at each of the pencil marks. *Note: If you are mounting onto tiles you will need to use a ceramic tile drill bit first.*