




# Knurled floor-mounted door stop

## Fitting your knurled floor-mounted door stop


Your door stop is supplied with a sleeve anchor fixing which is suitable for concrete type floors:

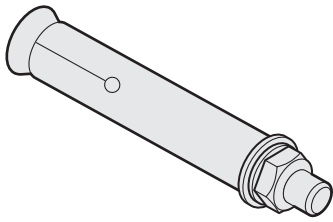

Sleeve anchor suitable for concrete floors

- 1 Check the floor surface onto which you wish to mount your door stop. The surface needs to be secure, such as a concrete floor. Check for the presence of hidden cabling or piping under the floor.
- 2 Make a mark on the floor surface at the centre point of where door stop needs to be located.
- 3 Use an 8mm masonry drill bit to create a hole roughly 48mm deep.
- 4 Make sure the nut of the supplied sleeve anchor is loose and then insert the body of it fully into the hole until the washer is flush with the floor surface.
- 5 Use a 10mm spanner to fully tighten the nut so that the sleeve within the hole expands and is held firmly in place (do not overtighten).

Use **8mm** diameter masonry drill bit

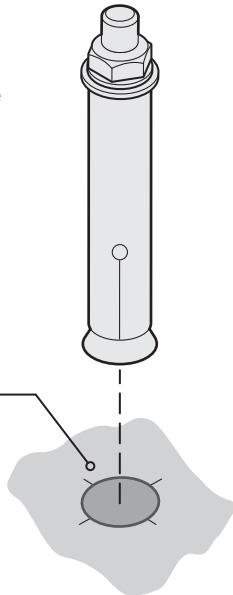

- 6 Carefully engage the underside of the door stop with the protruding thread of the fixing and rotate it clockwise until tight and secure against the floor surface.

