




Wardrobe handle


Your wardrobe handle is supplied with four countersunk M5 screws that are 16mm in length. Check two important things:

- Check the thickness of the wardrobe doors. If the doors are less than 16mm thick, you will need to source replacement countersunk screws that are just less than the door thickness in length.
- Check the gap between your wardrobe doors (if you are installing two handles). The gap needs to be 5mm or more in order to accommodate two handles and still allow easy opening:

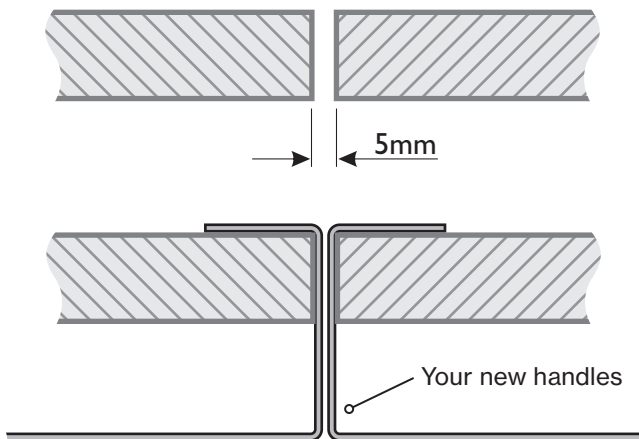

To fit your wardrobe handle

- 1 Open the wardrobe door and hold the handle against the door at the required height. The smaller side of the handle (with the holes) goes against the inside of the door. *Note: This is easier if someone can help you by holding the handle:*

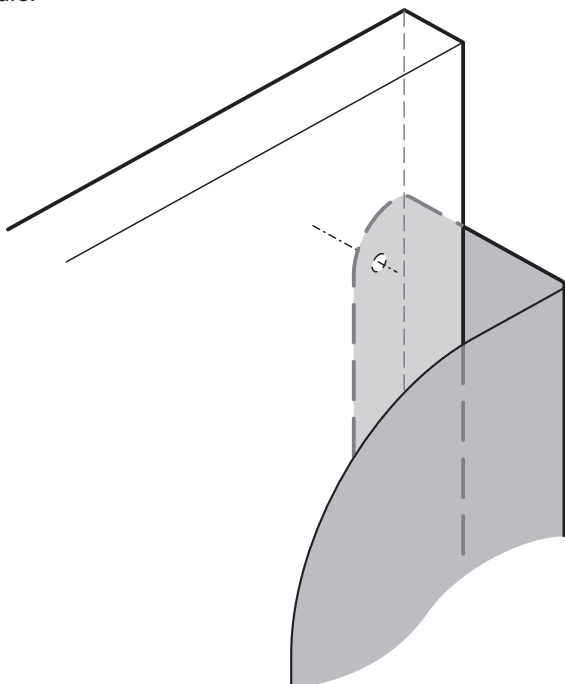

- 2 Using a pencil, mark the centres of the four mounting holes into the door.
- 3 We recommend that you drill pilot holes for the mounting points, to help prevent the wardrobe door from splitting. Use a drill bit that is just smaller than the diameter of the screws to make holes at the marked points - be careful not to drill too deeply.
- 4 Secure the handle onto the door using four screws:

