



# 13A UNSWITCHED FUSED SPUR

**WARNING** Never take risks with electrical safety. Always disconnect the mains power before beginning any electrical work and test that it is isolated - it is NOT enough just to turn off the light switch. Electrical products must be installed in accordance with IET regulations (BS 7671). If you are in any doubt, always consult a qualified electrician or an experienced person registered with an electrical Competent Person Scheme. Further information is available online or from your Local Authority. If the lighting circuit is not protected by a Residual Current Device (RCD) then the installation should be carried out and tested by a qualified electrician. If necessary, use a suitable stepladder, but first read the useful advice given by the Health and Safety Executive. Visit [www.hse.gov.uk](http://www.hse.gov.uk) and search for 'using stepladders'.


## Your 13A unswitched fused spur

Your 13A unswitched fused spur is suitable for indoor use only. It fits a standard UK single gang wall box; which should have a minimum of 35mm depth to allow enough space for connections once it is screwed into place.

*Note: This product must be installed in accordance with local building regulations.*

**IMPORTANT:** If you are in any doubt, STOP and seek professional help. Do not proceed unless you are sure.


Remove the front cover from your switch. Insert a small flat blade screwdriver into one of the base slots and carefully prise off the front cover.

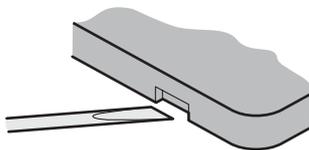

## To fit your 13A unswitched fused spur

- 1 Ensure that the mains supply to the circuit is isolated.
- 2 Remove the two screws securing the existing socket.
- 3 Take a photo of the connections to its terminals. There should be two sets (Live, Neutral and Earth) of wires; one set are the supply (IN) and the other set leads to the load (OUT). You need to determine which is which and connect them to the new fused unit accordingly.
- 4 Disconnect the wires from the existing unit and remove it from the installation.
- 5 Connect the wires to your new unswitched fused spur as shown in the diagram.
- 6 Ensure that the bare copper earth connections have green/yellow sleeves to isolate them from other connections. Check that screw terminals are properly tightened and no bare wires are visible.
- 7 Secure the unswitched fused spur in place and test it.

Connection	Old wire colours	New wire colours	Diagram shading
Live (L)	Red	Brown	
Neutral (N)	Black	Blue	
Earth (⊕)	Green	Green/Yellow	

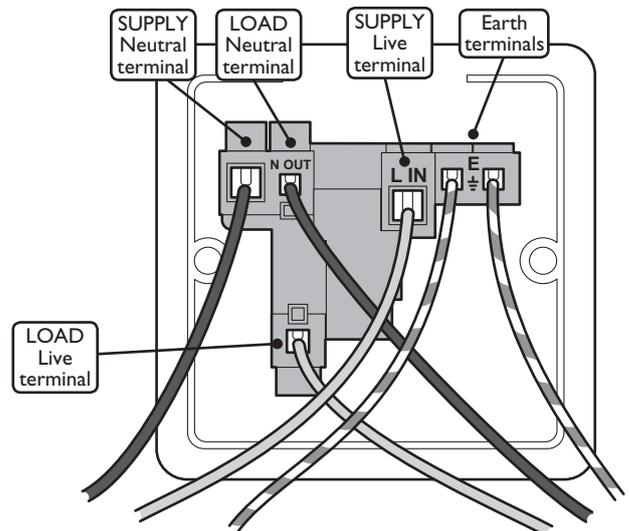

## To change the fuse

- 1 Isolate the power supply.
- 2 Carefully insert a small flat blade screwdriver into the left notch of the fuse holder and lever the fuse holder open.
- 3 Remove the existing fuse and replace with one of an identical capacity.
- 4 Push the fuse holder back in until it closes with a click.
- 5 Check the connected device for possible causes of the fuse issue.
- 6 When you are confident that all is OK with the connected device, restore power to the circuit.

